



LUMOS MOZZIE ZAPPER LITE

10001884

INSTRUCTIONS



LUMOS MOZZIE ZAPPER



USB CHARGING CABLE



CLEANING BRUSH

IMPORTANT

Carefully read all instructions before use and save for future reference.

INCLUDES

- 1 x Lumos Mozzie Zapper Lite
- 1 x USB Charging Cable
- 1 x Cleaning Brush

CHARGING

The unit contains a battery indicator light. Green shows fully charged, red charging.

Step 1: Open the dust cover on the top of the unit.

Step 2: Plug the USB-C cable into the USB-C socket.

Step 3: Plug the USB cord into any USB outlet on a computer, wall adapter (not included), etc.

NOTE: Charging while using a USB wall adapter will be faster than a computer USB port.

Step 4: When charging is complete, remove the USB cord and store.

Step 5: Close the dust cover.

OPERATION

Step 1: To switch on/off, press the ON/OFF switch. A clicking sound is heard when pressed.

Step 2: Press the ON/OFF button to cycle through the below modes:

Press 1x: Light on high

Press 2x: Light on medium

Press 3x: Light on low

Press 4x: UV light and high voltage grid on

Press 5x: UV light and high voltage grid on, and light on low

Press 6x: Turn off

Step 3: Press and hold the ON/OFF switch in any mode to turn off the unit.

NOTE: The UV light can only be used together with the high voltage grid. This unit offers protection against mosquitos and other flying insects. No toxic vapours or similar will be released. The insects are attracted by the UV light. Upon coming into contact with the electrical high voltage grid, the bugs are dehydrated.

MOUNTING

Step 1: Ensure that there is sufficient free space around the unit.

Step 2: Hang the product with the hanging loop on an existing hook or similar.

CLEANING

Step 1: Switch the unit off.

Step 2: Only clean with a dry cloth.

Step 3: Do not use any strong detergents and/or chemicals.

Step 4: Do not immerse in water.

Step 5: Store in a cool, dry place and protected from UV light.

CLEANING THE GRID

Step 1: Switch the unit off.

Step 2: Shake and tip out dead insects from the chamber. In addition, try blowing vigorously and intermittently to remove.

Step 3: Carefully remove stubborn debris with the cleaning brush. Then repeat step 1.

WARNING

1. While the product is in operation, do not touch the protective grid or the high voltage grid located in the chamber. A small residual charge still exists a few seconds after the product has been switched off.
2. Never use the unit in the immediate vicinity of open water, swimming pools or in the immediate vicinity of bathtubs, showers or similar.
3. Do not use the unit in the direct vicinity of fire.
4. Ensure that the unit is charged every three months to protect the life of the battery.
5. Store the unit away from water, heat sources and metal objects.
6. Store the unit in a cool, dry place to prolong the battery life.
7. Do not impact, puncture, or drop the light.
8. Do not look directly into the light.
9. Use in dry areas only, do not expose to wet conditions.

SPECIFICATIONS

Dimensions	9.5L x 8.5W x 13.8H cm
Weight	255g
Light modes	Low, medium, high, UV
Lumens	50 (low) / 130 (medium) / 200 (high)
Beam distance	6m (low) / 14m (medium) / 26m (high)
Runtime (approx)	11.5hrs (UV) / 12hrs (low) / 6.5hrs (medium) / 4hrs (high)
Battery	3.7V 1200mAh lithium rechargeable
Charge time	3hrs



WARRANTY - For details see www.oztrail.com.au/warranty
OZtrail® is a registered trademark of
Adventure Trading Australia Pty Ltd

Designed by:
Adventure Trading Australia Pty Ltd
71 Charles Ulm Place, Eagle Farm,
QLD 4009, AUSTRALIA
Made in China

