

COMPANION[®]

TRUSTED SINCE 1941

ROAM INDUCTION COOKTOP



INSTRUCTION MANUAL

Model No. 10001887

IMPORTANT

- Please read this instruction manual carefully before operating the unit.



CAUTION: HOT SURFACES

Appliance generates heat during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to person or damage to property. This appliance is hot during operation and retains heat for some time after turning OFF.


CAUTION: KEEP OUT OF REACH OF CHILDREN

SAFETY INFORMATION

- This unit is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge.
- Children must be supervised at all times when around this unit.
- Do not alter or disassemble the unit. This may result in a risk of electric shock or fire.
- To be repaired by qualified persons only - contact Customer Service on 1300 362 921.
- Do not leave the unit unattended during use.
- Do not allow liquids to enter the unit.
- Do not expose to water or rain.
- Do not use near fire, gas or in high-temperature areas.
- Place the appliance on a level, stable, heat resistant surface.
- Do not place the unit on or near flammable non-heat resistant materials or surfaces including tablecloths, plastic boards, etc.
- Do not use the unit on a metal surface.
- Place the unit in a well-ventilated area and on a flat surface with at least 10cm away from side and back wall.
- Do not block the air intake holes and exhaust vent.
- Do not use if the product is cracked, deformed, or damaged.
- Do not drop or subject the unit to strong impact.
- When in use the unit will become very hot. Do not touch the cooking surface during use or while cooling down.
- Do not touch the crystal plate after removing the pot or pan as it is very hot.
- Never place the unit against a wall or other products. Leave at least 10cm of free space around the entire unit.
- Do not place metallic objects such as forks, knives or spatulas on the cooking plate as they can get very hot.

- Do not connect, operate, or disconnect this unit with wet hands.
- This product is for household use only. Do not use for commercial purposes.
- Do not use the unit for anything other than its intended purpose.
- To protect against electric shock do not immerse or expose cord, plug or appliance to water or other liquids.
- Do not allow the cord to hang over the edge of a table or counter, or touch hot surfaces.
- If cords become damaged, they must be replaced by a qualified person.
- Do not damage the cable, forcefully bend it, pull it, twist it, or use it if frayed or broken.
- Unplug the unit when not in use and before cleaning. Allow to cool before cleaning.
- Do not operate the unit with a damaged cord or plug or after the unit malfunctions, or has been damaged in any manner. Stop use immediately and contact Customer Service on 1300 362 921.
- When unplugging the unit, always hold the connector - do not pull on the cord.
- Wipe the power plug when it is dusty. Failure to do so may result in fire.
- Do not unplug the power plug and connection plug with wet hands.
- Do not use for purposes other than cooking food.
- Do not move the unit during use.
- Do not move the unit with the pot or pan on it.
- Do not heat an empty pot as it will be overheated and trip the safety device.
- Do not place items such as radios, televisions, atm cards, etc close to the unit as it will be affected by its magnetic current.
- Maintenance or repair must be carried out after cooling.
- Do not clean the unit immediately with water after cooking as the crystal plate may crack.
- Unplug the power plug from the socket before maintenance or cleaning.

UNDERSTANDING THE APPLIANCE

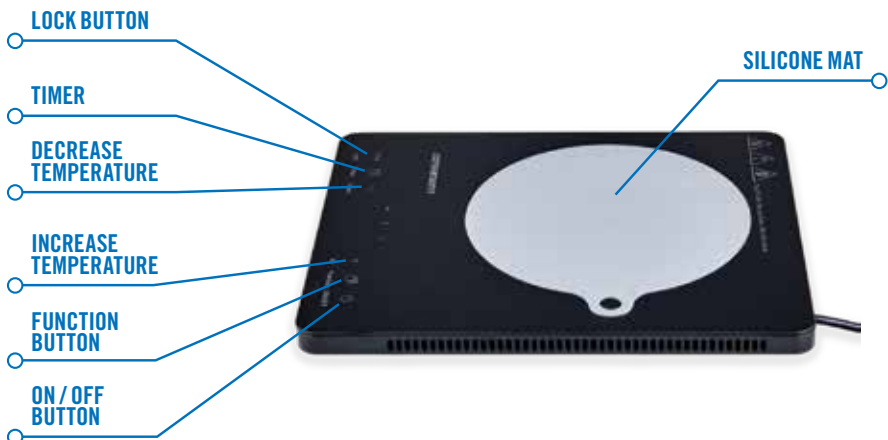

BEFORE FIRST USE

Remove and dispose of any packaging material from the unit. Product rating label stickers should be permanently kept on the unit.

COOKWARE SUITABILITY

Cookware with a magnetic metal base is suitable for use on induction cooktops. Steel, cast iron, enamel iron and stainless steel are suitable. It is recommended that the diameter of the pan or pot is 12 to 26cm.



ENAMEL
IRON POT



IRON OR ENAMELED
IRON POT



CAST IRON
PAN



IRON POT



DEEP-FRY PAN



STAINLESS
STEEL POT



IRON PLATE

NOTE: Heat resistant glass, ceramic, copper and aluminium are not suitable for induction cooktops.

SETTING UP

Step 1. Place the unit on a flat, stable surface. This will ensure that cookware does not tilt.

NOTE: It is recommended to use the included silicone mat while cooking. This reduces the risk of cookware sliding on the cooktop surface.

Step 2. Connect the unit to suitable 240V AC power source. The unit is rated to 2000W.

OPERATION

Before connecting the Roam Induction Cooktop to the power supply, ensure that the unit is compatible with the power supply (2000W minimum).

IMPORTANT

- Place the unit in a well-ventilated area and on a flat surface with at least 10cm away from side and back wall.
- Do not block the air intake holes and exhaust vent.
- Do not place the unit on or near flammable non-heat resistant materials or surfaces including tablecloths, plastic boards, etc.
- Do not use the unit on a metal surface.
- Do not place metallic objects such as forks, knives or spatulas on the cooking plate as they can get very hot.
- A pot or pan **MUST** be placed on the induction cooktop before operating the unit.

Step 1. Place an induction compatible pot or pan in the cooking zone.

Step 2. Press the **ON / OFF** button. The LED display will turn ON.

Step 3. Choose to cook via the **POWER** or **TEMPERATURE** function.

POWER

Press the **FUNCTION** button. The unit will start at 1300W power level. This level can be adjusted by pressing plus (+) or minus (-) buttons.

Power levels include 200W, 400W, 800W, 1000W, 1300W, 1600W, 1800W and 2000W.

TEMPERATURE

Press the **FUNCTION** button twice to cook by temperature function. This level can be adjusted by pressing plus (+) or minus (-) buttons.

Temperature levels include 60°C, 80°C, 100°C, 130°C, 160°C, 180°C, 210°C and 240°C.

Step 4. Press the **ON / OFF** button to turn off the unit.

NOTE: The fan will continue to run for 1 minute to dissipate heat. DO NOT remove the power plug until the fan stops.



TIMER

The unit has a timer function. DO NOT leave the unit unattended.

Step 1. Set up and turn the unit on as indicated.

Step 2. Press the **TIMER** button.

Step 3. To set the timer within 3 hours, the indicator “T” will light up. Adjust the timer by pressing the plus (+) or minus (-) button. Short press $\pm$ 1min, long press $\pm$ 10 min. The unit will automatically turn off when the set time is completed.

SAFETY LOCK

The unit has a safety lock function. When enabled, all buttons except for the **LOCK** button are inactive and cooking will continue.

Step 1. Set up and turn the unit on as indicated.

Step 2. Press the **LOCK** button to activate safety lock.

Step 3. To unlock, press and hold the **LOCK** button for 3 seconds.

CLEANING INSTRUCTIONS

Step 1. Ensure the unit is turned off and disconnected from the power supply.

Step 2. Ensure the unit is completely cool. DO NOT clean the unit when hot.

Step 3. With a damp cloth and mild detergent, wipe the unit to remove any food residue.

Step 4. Ensure all components are completely dry.

Step 5. Store the unit in the carry bag.

NOTE: DO NOT use any abrasive cleaners or hard chemicals. DO NOT immerse the unit in water.

MAINTENANCE

For further information or assistance please contact customer service on 1300 362 921 or email: info@adventureoperations.com

ERROR CODES

ERROR CODE	CAUSE	SOLUTION
E0	There is no pot/pan or unsuitable pot/pan on induction cooker.	Change to a suitable pot/pan.
E1	Supply voltage is too low (lower than 85V).	Check power supply. Turn on the unit after power supply is back to normal.
E2	Supply voltage is too high (higher than 275V).	Check power supply. Turn on the unit after power supply is back to normal.
E3	Plate surface temperature sensor is not connected well.	If error continues, contact Customer Service.
E4	The thermistor of IGBT (Insulated Gate Bipolar Transistor) is not connected well.	Unit is not monitoring the temperature. Contact Customer Service.
E5	Dry heating.	There is no food in pot. Check if the pots are in good condition.
E6	The temperature of IGBT (Insulated Gate Bipolar Transistor) is over heated.	Check for air exhaust block or fan stuck.
E7	Plate surface temperature sensor failure.	If error continues, contact Customer Service.

SPECIFICATIONS

Part No.	10001887
Voltage	220 - 240V ~ 50 / 60 Hz
Wattage	2000W
Temperature Range	60°C / 80°C / 100°C / 130°C / 160°C / 180°C / 210°C / 240°C
Power Range	200 / 400 / 800 / 1000 / 1300 / 1600 / 1800 / 2000W
Dimensions	37L x 29W x 4H cm
Weight	2.3kg
Connection	240V cable
Cable length	1.5m
Protections	Safety lock Automatic shut-off protection Auto pan identification
Pack Contents	1 x Roam Induction Cooktop 1 x Silicone mat 1 x Storage bag 1 x Instruction manual

WARRANTY POLICY

1. Products distributed by Adventure Operations Australia Pty Ltd and any of our subsidiaries come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if products fail to be of acceptable quality and the failure does not amount to a major failure.
2. In addition, we warrant that this product will be free from defects in materials and workmanship under normal use as described in the published product documentation for **1 year** from the date of original purchase (Limited Warranty). This Limited Warranty is only valid and enforceable in Australia and will apply only if you have purchased the product from us or our authorised resellers.
3. To the extent permitted by the Australian Consumer Law and any applicable local law:
 - (a) our obligations under this Limited Warranty are limited to the repair, replacement or refund of covered parts that prove defective under normal use during the Limited Warranty and does not extend to any claim for damages that you or any other person may have for any loss (including without limitation consequential damages or loss of profit, freight/shipping or travel costs), or damage howsoever caused whether or not such loss or damage arises as a result of any defect in the product or from the failure or omission on our part to comply with any obligation at law;
 - (b) in replacing a defective product under the Limited Warranty, we may, at its discretion, substitute a model of equivalent nature where the exact model is unavailable;
 - (c) this Limited Warranty does not apply to damage caused by failure and damage caused by improper use and abuse, fair wear and tear, accidents, misuse (including failure to follow instructions regarding care and maintenance of the product), neglect, disassembly, alterations or external causes such as, but not limited to, water damage, exposure to sharp objects, exposure to excessive force, anomalies in the electrical current supplied to the product (if applicable), and extreme thermal or environmental conditions;
 - (d) we may elect, at our discretion and as an alternative to repairing or replacing a defective part to refund the cost of the relevant product upon it being returned to us; and
 - (e) this Limited Warranty does not extend to any products acquired for the purposes of re-supply, or for use in a manufacturing, or repair processes.
4. This warranty may be claimed by:
 - returning the product to its place of purchase, with a detailed proof-of-purchase clearly showing the date and detail of the purchase;
5. If you have any questions concerning this warranty policy, you may contact us in writing:
 Adventure Operations, 71 Charles Ulm Place, Eagle Farm, 4009 QLD, or by email:
warranty@adventureoperations.com or visit our website: www.adventureoperations.com

TO THE EXTENT PERMITTED BY LAW, ADVENTURE OPERATIONS AUSTRALIA PTY LTD, ITS SUBSIDIARIES AND ITS VENDORS DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR ANY SIMILAR STANDARD IMPOSED BY APPLICABLE LEGISLATION AND ADVENTURE OPERATIONS AUSTRALIA PTY LTD AND ITS SUBSIDIARIES' RESPONSIBILITY TO REPAIR, REPLACE, OR OFFER A REFUND FOR DEFECTIVE PRODUCTS IS THE SOLE AND EXCLUSIVE REMEDY PROVIDED TO ITS CUSTOMERS UNDER THIS DOCUMENT.

NOTE:

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

NOTE:

This image shows a single sheet of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

WARRANTY - For details see www.companionoutdoor.com/warranty

Companion® is a registered trademark of
Adventure Trading Australia Pty Ltd

Designed by:
Adventure Trading Australia Pty Ltd
71 Charles Ulm Place,
Eagle Farm, QLD 4009
AUSTRALIA



Made in China