



TRUSTED SINCE 1941

ROAM SWIFT SEAR BBQ 240V



INSTRUCTION MANUAL

Model No. 10001888

IMPORTANT

- Please read this instruction manual carefully before operating the unit.



CAUTION: HOT SURFACES

Appliance generates heat during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to person or damage to property. This appliance is hot during operation and retains heat for some time after turing OFF.

CAUTION: KEEP OUT OF REACH OF CHILDREN

SAFETY INFORMATION

- This unit is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge.
- Children must be supervised at all times when around this unit.
- Do not alter or dissemble the unit. This may result in a risk of electric shock or fire.
- To be repaired by qualified persons only - contact Customer Service on 1300 362 921.
- Do not leave the unit unattended during use.
- Do not allow liquids to enter the unit.
- Do not expose to water or rain.
- Do not use near fire, gas or in high-temperature areas.
- Place the unit on a level, stable, heat resistant surface.
- Do not place the unit on or near flammable non-heat resistant materials or surfaces including tablecloths, plastic boards, etc.
- Do not use if the product is cracked, deformed, or damaged.
- Do not drop or subject the unit to strong impact.
- When in use the unit will become very hot. Do not touch the cooking plate during use or while cooling down.
- Metallic objects such as forks, knives or spatulas should not be placed on the cooking plate as they can get very hot.
- Do not connect, operate, or disconnect this unit with wet hands.
- Do not use this unit to warm up plates.
- Never move the unit when hot or when cooking food. Allow to completely cool before moving.
- This product is for household use only. Do not use for commercial purposes.

- Do not use the unit for anything other than its intended purpose.
- Use a socket rated above 15A. If used with other appliances, it may cause the socket to become hot and ignite.
- This product should not be used together with electrical appliances above 3000W. Failure to do so may result in fire or electric shock.
- To protect against electric shock do not immerse or expose cord, plug or appliance to water or other liquids.
- Do not allow the cord to hang over the edge of a table or counter, or touch hot surfaces.
- Do not use a power cord other than that supplied with the product.
- If cords become damaged, they must be replaced by a qualified person.
- Do not damage the cable, forcefully bend it, pull it, twist it, or use it if frayed or broken.
- Unplug the unit when not in use and before cleaning. Allow to cool before cleaning.
- Do not operate the unit with a damaged cord or plug or after the unit malfunctions, or has been damaged in any manner. Stop use immediately and contact Customer Service on 1300 362 921.
- When unplugging the unit, always hold the connector - do not pull on the cord.
- Wipe the power plug when it is dusty. Failure to do so may result in fire.
- Do not unplug the power plug and connection plug with wet hands.
- Do not immerse or splash water on the thermostat.
- Do not use without connecting the magnetic docking stand and the cooking plate.
- Do not turn on the power when there is only the magnetic docking stand.
- Do not use for purposes other than cooking food.
- Do not heat the product or the cooking plate directly with fire.
- Turn the unit off at the magnetic docking stand before cutting off the power.
- Do not remove the cooking plate during use.
- Do not insert metal or flammable foreign objects such as hairpins into the connection terminals.
- Maintenance or repair must be carried out after cooling.
- Unplug the power plug from the socket before maintenance.
- Do not use metal cookware or abrasive cleaning products as this may damage the non-stick coating.
- The unit is not dishwasher safe.


UNDERSTANDING THE APPLIANCE



TOP OF COOKING PLATE



BOTTOM OF COOKING PLATE

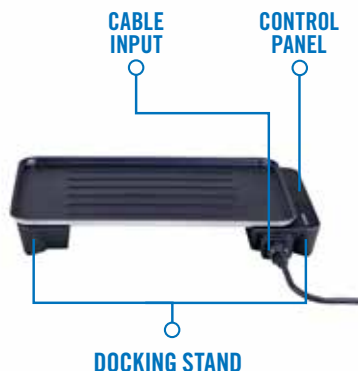

240V CABLE



USER MANUAL

BEFORE FIRST USE

- Remove and dispose of any packaging material from the unit. Product rating label stickers should be permanently kept on the unit.
- Wash the cooking plate in warm water, rinse and dry thoroughly.
- DO NOT use abrasive brushes on the cooking surface as it will damage the coating.

SETTING UP

- Step 1.** Connect the magnetic docking stands to the cooking plate (Fig 1).
- Step 2.** Ensure the cooking plate is securely attached to each magnetic docking stand (Fig 2).
- Step 3.** Insert the 240V cable into the control panel docking stand (Fig 3).



Fig 1



Fig 2



Fig 3



COOKING PLATE


Cooking plate is manufactured to be slightly bowed. This allows oil, fats and liquids to drain to the edges.

OPERATION

Before connecting the Roam Swift Sear BBQ to the power supply, ensure that the unit is compatible with the power supply.

- The starting power of the unit is 750W. It will gradually decrease in power level once it reaches 240°C. The unit's rated power is 600W.
- The unit will heat up to 240°C in under 2 minutes.
- The unit will automatically turn off after 1 hour if not used.

- Metallic objects such as forks, knives or spatulas should not be placed on the cooking plate as they can get very hot.
- Do not connect, operate, or disconnect this unit with wet hands.
- Do not use this unit to warm up plates.
- Ensure the unit is cleaned thoroughly after each use.

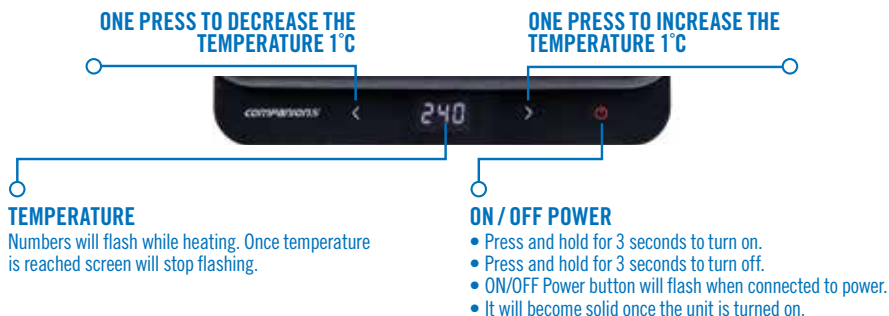

CLEANING

- Step 1.** Ensure the unit is turned off and disconnected from the power supply.
- Step 2.** Ensure the unit is completely cool.
- Step 3.** With a damp cloth, sponge or kitchen paper, wipe the cooking plate to remove any food residue.
- Step 4.** Disassemble the unit by disconnecting the cooking plate from the magnetic docking stands.
- Step 5.** Ensure all components are completely dry.
- Step 6.** Store the unit in the carry bag.

NOTE:

DO NOT use any abrasive cleaners or hard chemicals.
 DO NOT submerge the end of the cooking plate with the connection terminal in water.
 DO NOT submerge the magnetic docking stands in water.

MAINTENANCE

For further information or assistance please contact customer service on 1300 362 921 or email: info@adventureoperations.com

TROUBLESHOOTING

ISSUE	CAUSE	SOLUTION
Magnetic docking stand will not insert	Incorrect magnetic docking stand used	Check that the orientation of the magnetic docking stand is correct – there is a different stand for each end of the unit
Cooking plate is not heating	Unit is not turned on	Check the ON/OFF button is flashing. Press and hold the power button for 3 seconds
Cooking plate is not heating	Cooking plate is unstable	Ensure the cooking plate is connected to the magnetic docking stand correctly. Ensure the unit is set up on a level surface
Unit automatically turned off	Unit not used for 1 hour or more	If the unit is not used for 1 hour or more, it will automatically turn off for safety

SPECIFICATIONS

Part No.	10001888
Voltage	100 - 240V ~ 50 / 60 Hz
Wattage	600W (750W peak power)
Temperature Range	36.5°C - 240°C
Dimensions	35.6L x 23.3W x 5.5H cm
Dimensions (cooking plate)	33.3L x 23.3W x 1H cm
Weight	1.8kg
Connection	240V cable
Cable length	1.5m
Protections	Short circuit protection Thermal control overheating protection
Pack Contents	1 x Roam Swift Sear BBQ Cooking Plate 2 x Magnetic docking stands 1 x 240V AC power cable 1 x Storage bag 1 x Instruction manual

WARRANTY POLICY

1. Products distributed by Adventure Operations Australia Pty Ltd and any of our subsidiaries come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if products fail to be of acceptable quality and the failure does not amount to a major failure.
2. In addition, we warrant that this product will be free from defects in materials and workmanship under normal use as described in the published product documentation for **1 year** from the date of original purchase (Limited Warranty). This Limited Warranty is only valid and enforceable in Australia and will apply only if you have purchased the product from us or our authorised resellers.
3. To the extent permitted by the Australian Consumer Law and any applicable local law:
 - (a) our obligations under this Limited Warranty are limited to the repair, replacement or refund of covered parts that prove defective under normal use during the Limited Warranty and does not extend to any claim for damages that you or any other person may have for any loss (including without limitation consequential damages or loss of profit, freight/shipping or travel costs), or damage howsoever caused whether or not such loss or damage arises as a result of any defect in the product or from the failure or omission on our part to comply with any obligation at law;
 - (b) in replacing a defective product under the Limited Warranty, we may, at its discretion, substitute a model of equivalent nature where the exact model is unavailable;
 - (c) this Limited Warranty does not apply to damage caused by failure and damage caused by improper use and abuse, fair wear and tear, accidents, misuse (including failure to follow instructions regarding care and maintenance of the product), neglect, disassembly, alterations or external causes such as, but not limited to, water damage, exposure to sharp objects, exposure to excessive force, anomalies in the electrical current supplied to the product (if applicable), and extreme thermal or environmental conditions;
 - (d) we may elect, at our discretion and as an alternative to repairing or replacing a defective part to refund the cost of the relevant product upon it being returned to us; and
 - (e) this Limited Warranty does not extend to any products acquired for the purposes of re-supply, or for use in a manufacturing, or repair processes.
4. This warranty may be claimed by:

returning the product to its place of purchase, with a detailed proof-of-purchase clearly showing the date and detail of the purchase;
5. If you have any questions concerning this warranty policy, you may contact us in writing:
 Adventure Operations, 71 Charles Ulm Place, Eagle Farm, 4009 QLD, or by email:
warranty@adventureoperations.com or visit our website: www.adventureoperations.com

TO THE EXTENT PERMITTED BY LAW, ADVENTURE OPERATIONS AUSTRALIA PTY LTD, ITS SUBSIDIARIES AND ITS VENDORS DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR ANY SIMILAR STANDARD IMPOSED BY APPLICABLE LEGISLATION AND ADVENTURE OPERATIONS AUSTRALIA PTY LTD AND ITS SUBSIDIARIES' RESPONSIBILITY TO REPAIR, REPLACE, OR OFFER A REFUND FOR DEFECTIVE PRODUCTS IS THE SOLE AND EXCLUSIVE REMEDY PROVIDED TO ITS CUSTOMERS UNDER THIS DOCUMENT.

NOTE:

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

WARRANTY - For details see www.companionoutdoor.com/warranty

Companion® is a registered trademark of
Adventure Trading Australia Pty Ltd

Designed by:
Adventure Trading Australia Pty Ltd
71 Charles Ulm Place,
Eagle Farm, QLD 4009
AUSTRALIA



Made in China