



TRUSTED SINCE 1941

ROAM SANDWICH GRILL PRESS



INSTRUCTION MANUAL

Model No. 10001895

IMPORTANT

- Please read this instruction manual carefully before operating the unit.
- Retain for future reference.



CAUTION: HOT SURFACES

Appliance generates heat during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to person or damage to property. This appliance is hot during operation and retains heat for some time after turning OFF.

CAUTION: KEEP OUT OF REACH OF CHILDREN

SAFETY INFORMATION

- This unit is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge.
- Children must be supervised at all times when around this unit.
- Do not alter or disassemble the unit. This may result in a risk of electric shock or fire.
- To be repaired by qualified persons only - contact Customer Service on 1300 362 921.
- Do not touch hot surfaces, use handles only.
- Place unit in a well ventilated area when in use.
- To protect against electric shock do not immerse or expose cord, plug or appliance to water or other liquids.
- Do not allow liquids to enter the unit.
- Do not use in places where it may come in contact with water and avoid exposure to rain.
- Do not use near fire, gas or in high-temperature areas.
- Unplug the unit when not in use and before cleaning. Allow to cool before cleaning.
- Do not leave the unit unattended during use.
- Place the appliance on a level, stable, heat resistant surface.
- Do not use metal cookware as this may damage the non-stick coating.
- Do not place the unit on or near flammable materials including tablecloths, etc.
- Never place the unit against a wall or other products. Leave at least 10cm of free space around the entire unit.
- Keep face and hands at a safe distance. Be aware of high temperatures when operating.
- When in use the unit may become very hot.

- Do not allow the cord to hang over the edge of a table or counter, or touch hot surfaces.
- Do not touch the cooking plate while in use.
- If cords become damaged, they must be replaced by a qualified person.
- Do not damage the cable, forcefully bend it, pull it, twist it, or use it if frayed or broken.
- Do not use if the product is cracked, deformed, or damaged.
- Do not drop or subject the unit to strong impact.
- Never move the unit when hot or when food is being cooked. Allow to completely cool before moving.
- Do not operate the unit with a damaged cord or plug or after the unit malfunctions, or has been damaged in any manner. Stop use immediately and contact Customer Service on 1300 362 921.
- When unplugging the unit, always hold the connector - do not pull on the cord.
- This product is for household use only. Do not use for commercial purposes.
- Do not use the unit for anything other than its intended purpose.

UNDERSTANDING THE APPLIANCE



BEFORE FIRST USE

Step 1. Remove and dispose of any packaging material from the unit. Product rating label stickers should be permanently kept on the unit.

Step 2. Wipe the cooking surfaces with a warm damp cloth.

Step 3. Allow to dry completely.

Step 4. Cooking plates can be lightly coated in oil, if desired prior to cooking.

NOTE: When the unit is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of the unit.

OPERATION

Before connecting the Roam Sandwich Grill Press to the power supply, ensure that the unit is compatible with the 12V power supply.

NOTE: The unit cannot be used in conjunction with a cig to Anderson adapter due to the high amp draw. A 40amp fuse or larger must be used to supply the Anderson port.

SANDWICH PRESS

Step 1. Place the unit on a level, flat and stable surface that is heat resistant. Allow 10cm of ventilation around the unit.

Step 2. Plug the Anderson connection into the power supply. This is a 12V Sandwich Grill Press and should be connected to a 12V power supply.

Step 3. The **POWER LIGHT** will turn on. Once preheated, approximately 10 minutes, the light will turn off.

Step 4. Using the **HANDLE**, open the unit and place the food on the bottom plate.

Step 5. Using the **HANDLE**, close the unit. The **POWER LIGHT** will turn on.

Step 6. Once cooked, remove food from the unit.

NOTE: DO NOT use metal cookware as this may damage the non-stick coating.

Step 7. Allow the unit to cool completely before moving or cleaning. Ensure the unit is cleaned thoroughly after each use.



GRILL

Step 1. Place the unit on a level, flat and stable surface that is heat resistant. Allow 10cm of ventilation around the unit.

Step 2. Plug the Anderson connection into the power supply. This is a 12V Sandwich Grill Press and should be connected to a 12V power supply.

Step 3. Slide and hold the **LOCK SWITCH** on the side of the unit while opening the unit flat. The top plate will be on a slight angle to help oil, fat and liquid drain to the oil barrier.

Step 4. Allow the unit to preheat for approximately 10 minutes.

Step 5. Place food on either plate – grill or flat plate.

Step 6. Once cooked, remove food from the unit.

NOTE: DO NOT use metal cookware as this may damage the non-stick coating.

Step 7. Allow the unit to cool completely before moving or cleaning. Ensure the unit is cleaned thoroughly after each use.



CLEANING INSTRUCTIONS

- Step 1.** Ensure unit is switched off and disconnected from the power source before cleaning.
- Step 2.** Clean exterior of the unit with a damp cloth only.
- Step 3.** Clean the cooking plates with warm water and detergent. It is slightly easier to clean when the cooking plates are slightly warm.
- Step 4.** Before moving or cleaning the unit, allow to cool completely.
- Step 5.** Ensure all components are completely dry before storing the unit.

NOTE: DO NOT use any abrasive cleaners, harsh chemicals or abrasive cleaning tools.

MAINTENANCE

For further information or assistance please contact customer service on 1300 362 921 or email: info@adventureoperations.com

SPECIFICATIONS

Part No.	10001895
Voltage	12V DC
Wattage	250W
Draw	20.4A
Temperature (max)	190°C
Dimensions	27.6L x 22.3W x 9.3H cm
Dimensions (cooking plates)	23.1L x 14.6W cm (each)
Weight	1.3kg
Connection	50A Anderson-style connector
Cable length	85 cm
Cable gauge	14AWG / 2.08mm ²
Fuse size	40A
Protections	Short circuit protection Thermal control overheating protection
Pack Contents	1 x Roam Sandwich Grill Press 1 x Instruction manual

WARRANTY POLICY

1. Products distributed by Adventure Operations Australia Pty Ltd and any of our subsidiaries come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if products fail to be of acceptable quality and the failure does not amount to a major failure.
2. In addition, we warrant that this product will be free from defects in materials and workmanship under normal use as described in the published product documentation for **1 year** from the date of original purchase (Limited Warranty). This Limited Warranty is only valid and enforceable in Australia and will apply only if you have purchased the product from us or our authorised resellers.
3. To the extent permitted by the Australian Consumer Law and any applicable local law:
 - (a) our obligations under this Limited Warranty are limited to the repair, replacement or refund of covered parts that prove defective under normal use during the Limited Warranty and does not extend to any claim for damages that you or any other person may have for any loss (including without limitation consequential damages or loss of profit, freight/shipping or travel costs), or damage howsoever caused whether or not such loss or damage arises as a result of any defect in the product or from the failure or omission on our part to comply with any obligation at law;
 - (b) in replacing a defective product under the Limited Warranty, we may, at its discretion, substitute a model of equivalent nature where the exact model is unavailable;
 - (c) this Limited Warranty does not apply to damage caused by failure and damage caused by improper use and abuse, fair wear and tear, accidents, misuse (including failure to follow instructions regarding care and maintenance of the product), neglect, disassembly, alterations or external causes such as, but not limited to, water damage, exposure to sharp objects, exposure to excessive force, anomalies in the electrical current supplied to the product (if applicable), and extreme thermal or environmental conditions;
 - (d) we may elect, at our discretion and as an alternative to repairing or replacing a defective part to refund the cost of the relevant product upon it being returned to us; and
 - (e) this Limited Warranty does not extend to any products acquired for the purposes of re-supply, or for use in a manufacturing, or repair processes.
4. This warranty may be claimed by:
 - returning the product to its place of purchase, with a detailed proof-of-purchase clearly showing the date and detail of the purchase;
5. If you have any questions concerning this warranty policy, you may contact us in writing:
 Adventure Operations, 71 Charles Ulm Place, Eagle Farm, 4009 QLD, or by email:
warranty@adventureoperations.com or visit our website: www.adventureoperations.com

TO THE EXTENT PERMITTED BY LAW, ADVENTURE OPERATIONS AUSTRALIA PTY LTD, ITS SUBSIDIARIES AND ITS VENDORS DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR ANY SIMILAR STANDARD IMPOSED BY APPLICABLE LEGISLATION AND ADVENTURE OPERATIONS AUSTRALIA PTY LTD AND ITS SUBSIDIARIES' RESPONSIBILITY TO REPAIR, REPLACE, OR OFFER A REFUND FOR DEFECTIVE PRODUCTS IS THE SOLE AND EXCLUSIVE REMEDY PROVIDED TO ITS CUSTOMERS UNDER THIS DOCUMENT.

NOTE:

[illegible]

WARRANTY - For details see www.companionoutdoor.com/warranty

Companion® is a registered trademark of
Adventure Trading Australia Pty Ltd

Designed by:
Adventure Trading Australia Pty Ltd
71 Charles Ulm Place,
Eagle Farm, QLD 4009
AUSTRALIA



Made in China